

SmartGen

MAKING CONTROL SMARTER

HVD300

VOLTAGE DETECTION RELAY

MULTIFUNCTIONAL PROTECTION MODULE

USER MANUAL



郑州众智科技股份有限公司
SMARTGEN(ZHENGZHOU) TECHNOLOGY CO.,LTD.



All rights reserved. No part of this publication may be reproduced in any material form (including photocopying or storing in any medium by electronic means or other) without the written permission of the copyright holder.

Smartgen reserves the right to change the contents of this document without prior notice.

Table 1 Software Version

Date	Version	Content
2014-08-07	1.0	Original release.
2014-10-09	1.1	Rename the product.
2015-03-24	1.2	1. Add "Multifunctional Protection Module" to the name 2. Change the minimum of under voltage protection threshold value to 0
2024-12-13	1.3	Update the logo of SmartGen and the information of company.

Table 2 - Symbol Instruction

Symbol	Instruction
 NOTE	Highlights an essential element of a procedure to ensure correctness.
 CAUTION	Indicates a procedure or practice, which, if not strictly observed, could result in damage or destruction of equipment.

CONTENT

1 OVERVIEW4

2 PERFORMANCE AND CHARACTERISTICS.....4

3 TECHNICAL PARAMETERS.....4

4 PANEL BUTTON DESCRIPTION5

5 FUNCTION DESCRIPTION6

6 SCOPES AND DEFINITIONS OF PROGRAMMABLE PARAMETERS7

7 TYPICAL DIAGRAM.....8

8 INSTALLATION DIMENSIONS.....9

1 OVERVIEW

HVD300 voltage detection relay is widely used in marine genset field and land genset field.

HVD300 voltage detection relay detects over voltage, under voltage, loss of phase, phase sequence wrong and other abnormal condition accurately and the corresponding relay will act when abnormal conditions occur.

2 PERFORMANCE AND CHARACTERISTICS

- Suitable for 3-phase 4-wire, 3-phase 3-wire, single phase 2-wire, and 2-phase 3-wire systems with frequency 50/60/400Hz;
- Detect 3-phase voltage and phase sequence accurately;
- With over voltage, under voltage, loss of phase and reverse phase sequence protection function;
- Adjustable potentiometer allows for set value adjusting and delay value setting;
- 2 relay output;
- One test button, test over/under voltage relay and indicator;
- Widely power supply range DC(8~35)V, suitable to different starting battery voltage environment;
- 35mm guide rail mounting;
- Modular design, pluggable terminal, compact structure with easy installation.

3 TECHNICAL PARAMETERS

Table 3 Technical Parameter

Parameter	Details
Working Voltage	DC8. 0V to 35. 0V, continuous power supply
Overall Consumption	<0.9W (Standby mode: ≤0.28W)
AC Input	AC30V~ AC620V (ph-ph)
AC Frequency	50Hz/60Hz/400Hz
Over Voltage Output	5A AC250V Volts free output
Under Voltage Output	5A AC250V Volts free output
Case Dimensions	89.7mm x 71.6mm x 60.7mm
Working Conditions	Temperature: (-25~+70)°C Humidity: (20~93)%RH
Storage Conditions	Temperature:(-25~+70)°C
Insulation Intensity	Apply AC2.2kV voltage between high voltage terminal and low voltage terminal; The leakage current is not more than 3mA within 1min.
Weight	0.24kg

4 PANEL BUTTON DESCRIPTION

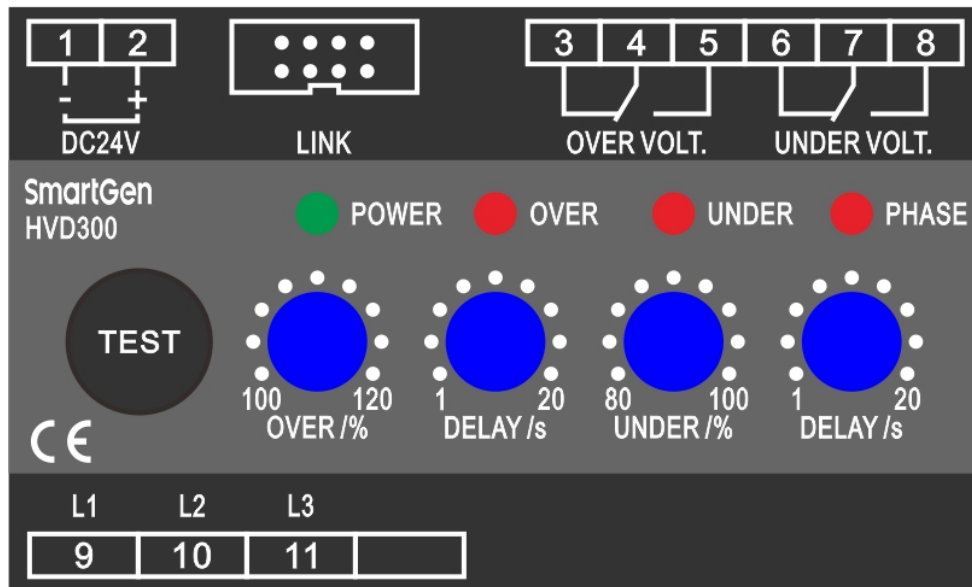


Fig.1 HVD300 Panel

Table 4 Description of Terminal Connection

No.	Functions		Cable Size	Remark		
1	DC input B-		1.0mm ²	Connected with negative of starter battery.		
2	DC input B+		1.0mm ²	Connected with positive of starter battery.		
3	OVER VOLT. RELAY	Normally Close	2.5 mm ²	Active when the AC voltage has exceeded the set value and the delay timer has expired while deactivate after the AC voltage returns to normal.	Normally open; Volts free output; 5A Rated	
4		COM				
5		Normally Open				
6	UNDER VOLT. RELAY	Normally Close	2.5 mm ²	When the VC voltage has exceeded the Under Voltage Set Value and fallen below the Under Voltage Potentiometer Set Value, the under voltage relay output after the delay timer has expired. The output deactivates after the voltage returns to normal.		
7		COM				
8		Normally Open				
9	L1		1.0 mm ²	Phase Voltage Input		
10	L2		1.0 mm ²			
11	L3		1.0 mm ²			
LINK Port	Used for parameters setting.					

Table 5 Function Description

Item	Description
Power Indicator	Power supply indicator; It is illuminated when the relay is powered up. (green light)
OVER Indicator	Over voltage Indicator; It flashes once per second when the voltage has exceeded the set value and illuminated when the delay timer has expired. When voltage return to normal, the indicator is extinguished.(red light)
UNDER Indicator	Under voltage Indicator; It flashes once per second when the voltage has fallen below the set value and illuminated when the delay timer has expired. When voltage return to normal, the indicator is extinguished (red light)
PHASE Indicator	Phase indicator; It is illuminated when Phase Sequence Wrong occurs; It flashes when loss of phase failure occurs while extinguished when other condition occurs. (red light) Power supply system: 3P3W or 3P4W
TEST Button	Press the button for 3 seconds, the over voltage relay, over voltage indicator and phase indicator output; Press the button and release the button, within 1 second, again press it for 3 seconds, under voltage relay and under voltage indicator output.
OVER /% Over Voltage Set Value Potentiometer	Used for adjusting over voltage set value. Range: (100~120)%; Setting value is the percentage of rated voltage value.
Delay Value Potentiometer	Used for adjusting over/under voltage delay value. Range: (1~20);
UNDER /% Under Voltage Set Value Potentiometer	Used for adjusting under voltage set value. Range: (80~100)%; Setting value is the percentage of rated voltage value.
Delay Value Potentiometer	Used for adjusting over/under voltage delay value. Range: (1~20);

Table 6 Configurable Parameters

No.	Items	Parameters	Defaults	Description
1	AC System	(0-3)	0	0: 3P4W, 1: 3P3W 2: 2P3W, 3:1P2W
2	Gen Rated Voltage	(30-30000)V	380	
3	Under Voltage	(5-100)	10	Active when the voltage has exceeded the set value.
4	Loss of Phase Enable	(0-1)	1	0: Disable; 1:Enable
5	Phase Sequence Wrong Enable	(0-1)	1	0: Disable; 1:Enable
6	Gen Rated Frequency	(10.0-400.0)Hz	50.0	
7	Volt. Trans.(PT)	(0-1)	0	0: Disable 1: Enable
8	Primary Voltage	(30-30000)V	100	
9	Secondary Voltage	(30-1000)V	100	
10	Communication Address	(1-254)	1	

PC Program:

Parameters setting and real-time monitoring can be implemented via LINK port by using PC software and an SG72 adapter which produced by our company. As follows:



Fig.2 PC Program Connection

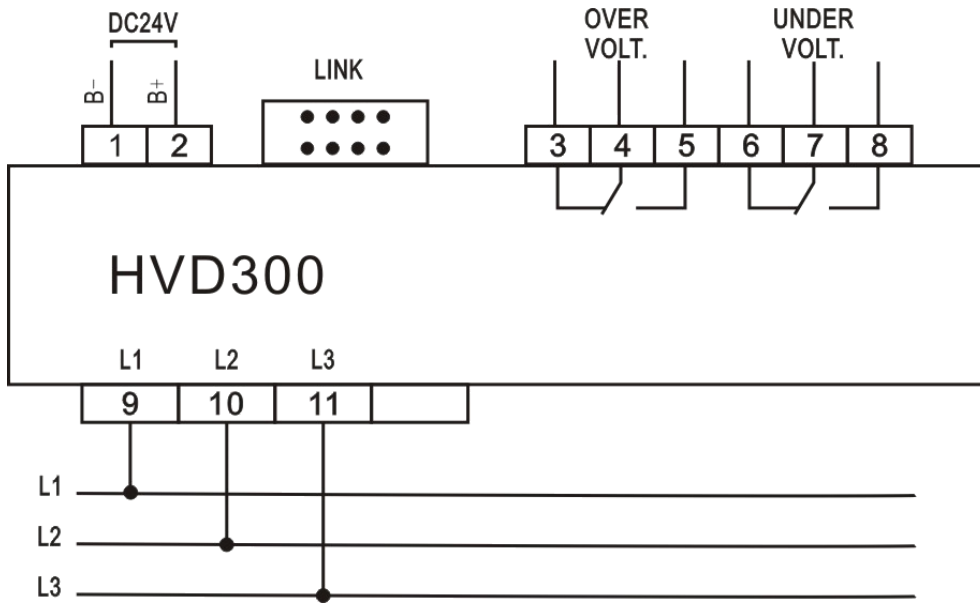


Fig.3 3 phase 3 wire/3 phase 4 wire

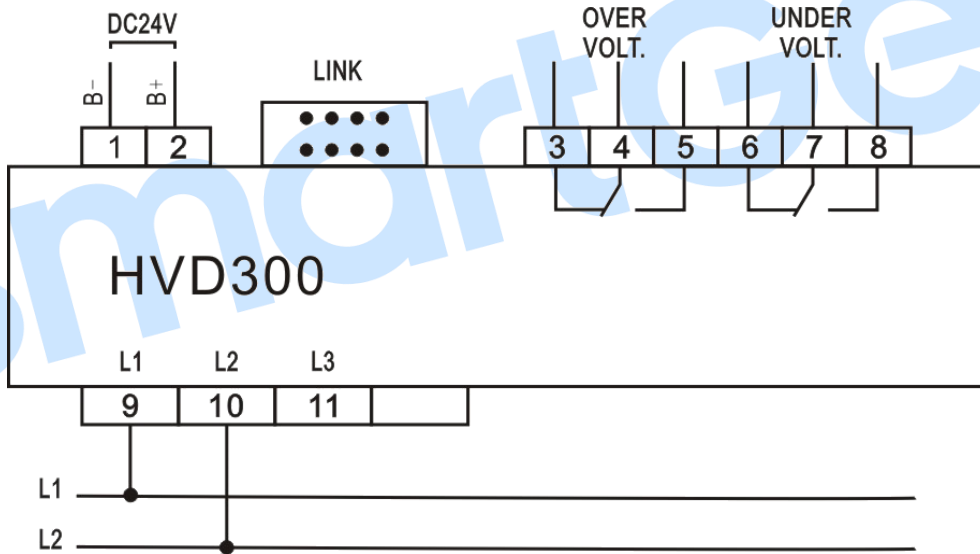


Fig.4 Single phase 2 wire/2 phase 3 wire

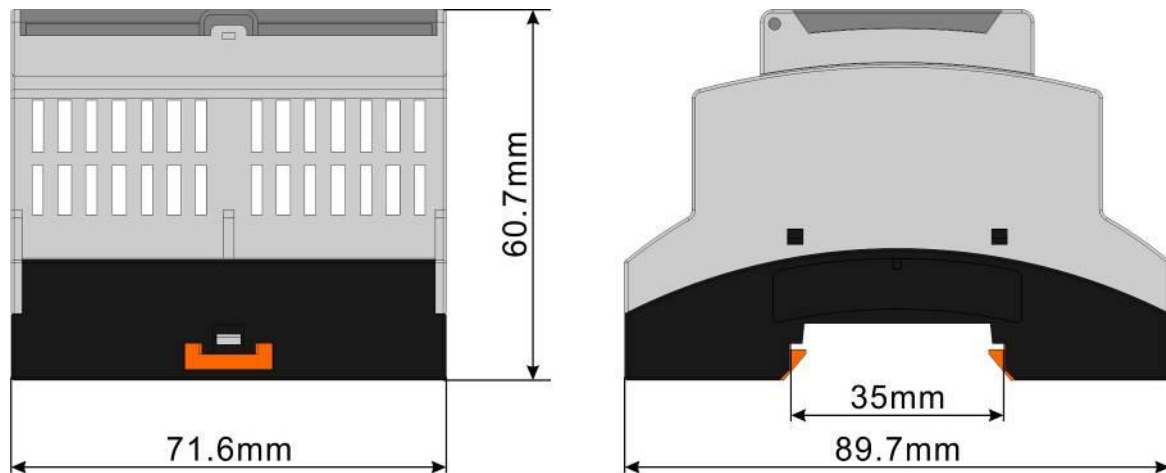


Fig.5 Case Dimension and Panel Cutout

1) Output And Expand Relays

All outputs are relay contact output type. If need to expand the relays, please add freewheel diode to both ends of expand relay's coils (when coils of relay has DC current) or, add resistance-capacitance return circuit (when coils of relay has AC current), in order to prevent disturbance to controller or others equipment

2) Withstand Voltage Test

⚠ CAUTION! When relay had been installed in control panel, if need the high voltage test, please disconnect relay's all terminal connections, in order to prevent high voltage into relay and damage it.