

SmartGen

MAKING CONTROL SMARTER

ATA600 DUAL POWER SWITCH ADAPTOR USER MANUAL



郑州众智科技股份有限公司
SMARTGEN(ZHENGZHOU)TECHNOLOGY CO.,LTD.

SmartGen Registered trademark

No.28 Xuemei Street, Zhengzhou, Henan, China

Tel: +86-371-67988888/67981888/67992951

+86-371-67981000(overseas)

Fax: +86-371-67992952

Email: sales@smartgen.cn

Web: www.smartgen.com.cn

www.smartgen.cn

All rights reserved. No part of this publication may be reproduced in any material form (including photocopying or storing in any medium by electronic means or other) without the written permission of the copyright holder.

SmartGen reserves the right to change the contents of this document without prior notice.

Table 1 Software Version

Date	Version	Note
2019-12-30	1.0	Original Release
2021-02-25	1.1	Add illustration for optional terminals.
2022-04-19	1.2	Update the logo of SmartGen.
2024-09-13	1.3	Modify the application diagram.

CONTENT

1	OVERVIEW.....	4
2	PERFORMANCE AND CHARACTERISTICS.....	4
3	SPECIFICATION	4
4	PANEL DESCRIPTION.....	5
5	APPLICATION DIAGRAM.....	8
6	ACCESSORY ILLUSTRATION	9
7	CASE DIMENSIONS	9

SmartGen

1 OVERVIEW

ATA600 Dual Power Switch Adapter is a kind of adapter which makes convenience for connection between HAT600/HAT600N/HAT600P/HAT700 dual power ATS controller and smart breaker, reducing a lot of field wiring work for users, not only labor saving, time saving but also reliable.

2 PERFORMANCE AND CHARACTERISTICS

- Suitable for 3Ph 4W AC system;
- Two integrated 400V/50Hz/10A circuits of air breaker, which are individually used to connect two circuits of AC power;
- All-in-one integrated adaptor, which can simultaneously connect S1 breaker, and S2 breaker;
- Suitable for HAT600/HAT600N/HAT600P/HAT700 dual power ATS controller;
- Cold rolled plate closure;
- With screw installation method, adapter is fixed by 4 screws.

3 SPECIFICATION

Table 2 Performance Parameters

Item	Description
Rated Working Voltage	AC 400V 50/60Hz
Max Working Current	10A
Air Breaker	400V~ 50Hz 10A
Case Dimensions	144.4mmx252mmx75.3mm
Working Temperature	(-25~+70)°C
Working Humidity	(20~93)%RH
Storage Temperature	(-30~+80)°C
Insulation Strength	Apply AC1.5kV voltage between high voltage terminal and low voltage terminal and the leakage current is not more than 3mA within 1min.
Weight	1.6kg

4 PANEL DESCRIPTION

4.1 PANEL ILLUSTRATION

Panel illustration is as Fig. 1.

Two circuits of air breaker, connect separately with S1/S2 AC power.

Connector M1, M2, M3 need to connect to the side of HAT600/HAT600N/HAT600P/HAT700 controller.

Connector S1-A, S1-B need to connect to the side of S1 breaker.

Connector S2-A, S2-B need to connect to the side of S2 breaker.

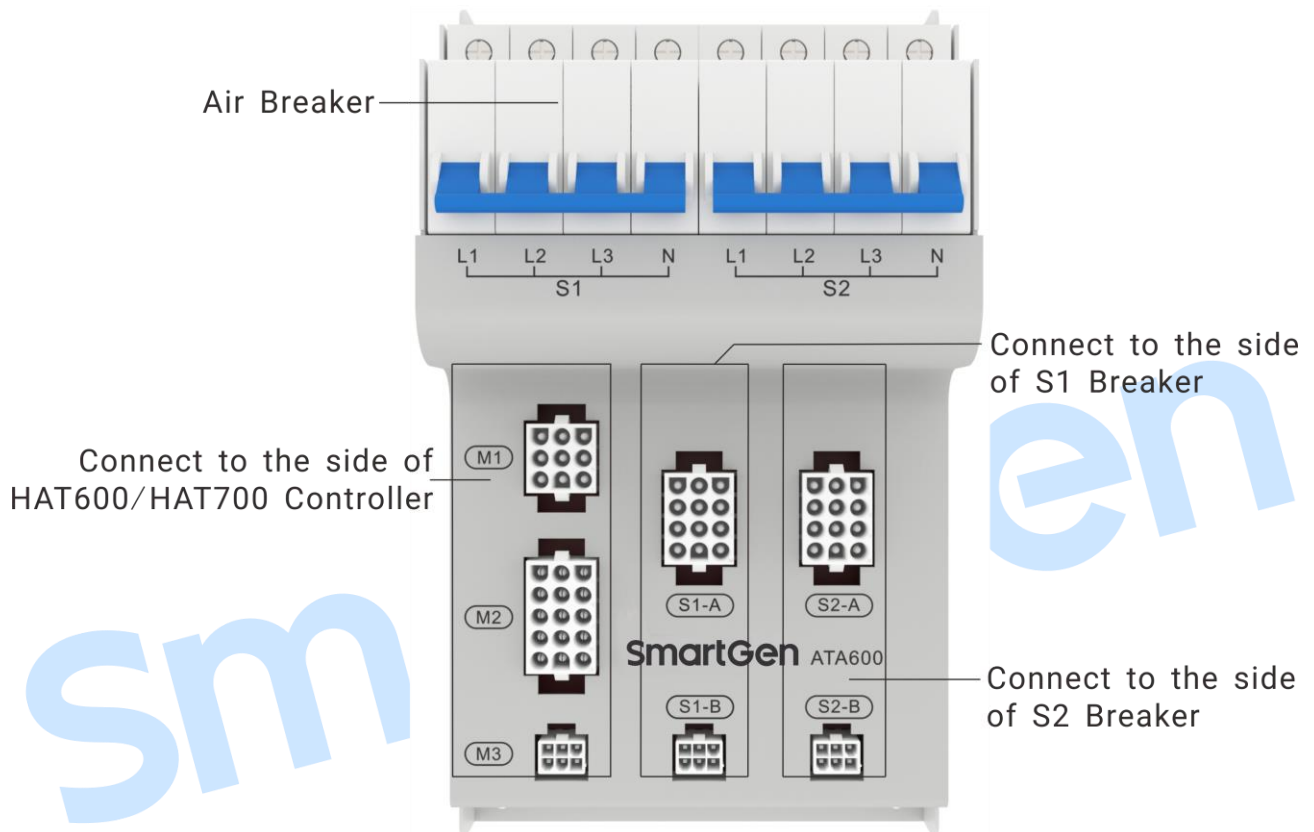


Fig. 1 Panel Instruction

4.2 CONNECTOR ILLUSTRATION

The pin numbers of connector terminals are as Fig. 2.

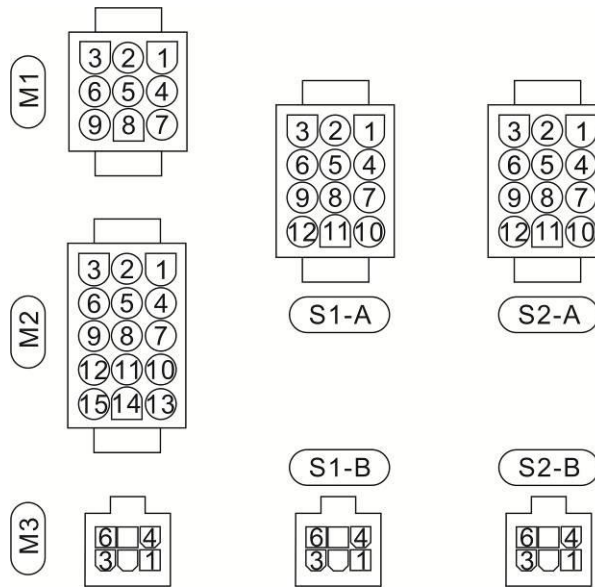


Fig. 2 Pin Numbers of Connector Terminals

Terminal Wirings of connector is as Table 3.

Table 3 Connector Wiring Illustration

Connector No.	Pin No.	Wire No.	Wire Harness No.	Connector No.	Pin No.	Wire No.	Wire Harness No.
M1	1	M-15	WH600-M-20-RM	S1-A	1	Q1-28	WH600-Q1-30-RM
	2	M-14			2	Q1-2	
	3	M-13			3	Q1-27	
	4	M-16			4	Q1-33	
	5	NC			5	Q1-30	
	6	M-12			6	Q1-36	
	7	M-17			7	Q1-24	
	8	M-18			8	Q1-35	
	9	M-11			9	Q1-29	
M2	1	M-4			10	Q1-32	
	2	M-28			11	Q1-1	
	3	M-5	12		Q1-25		
	4	M-8	S1-B	1	NC		
	5	M-1		2	Q1-4		
	6	M-9		3	Q1-23		
	7	M-6		4	NC		
	8	M-27		5	Q1-22		
	9	M-3		6	Q1-5		
	10	M-10					
	11	M-29					

Connector No.	Pin No.	Wire No.	Wire Harness No.	Connector No.	Pin No.	Wire No.	Wire Harness No.
	12	NC					
	13	M-7					
	14	M-2					
	15	M-30					
M3	1	M-21					
	2	M-22					
	3	NC					
	4	M-24					
	5	M-19					
	6	NC					

NOTE: Connector S2-A and S2-B connected wire number starts with Q2; Others are the same with S1-A, S1-B, connected with WH600-Q2-30-RM. For example: P1 wire number of connector S2-A is Q2-28.

Wire number definition:

Q1-1 e.g. Q1-1 means wire needs to connect to Terminal 1 of S1 breaker.

□□-□

□□-□ means wire needs to connect to corresponding terminal number of smart breaker;
 □ means the position where wire needs to connect;
 M means HAT600/HAT600N/HAT600P/HAT700 Controller;
 Q1 means S1 breaker;
 Q2 means S2 breaker;
 Q3 means bus tie breaker.

Wire harness definition:

WH600-□□-□□-□□

□□ means acronym of the smart breaker factory;
 □□ means wire harness length, unit: m. e.g. 30 means 3.0m;
 □□ means the position where wire needs to connect; definition same as wire

No.

5 APPLICATION DIAGRAM

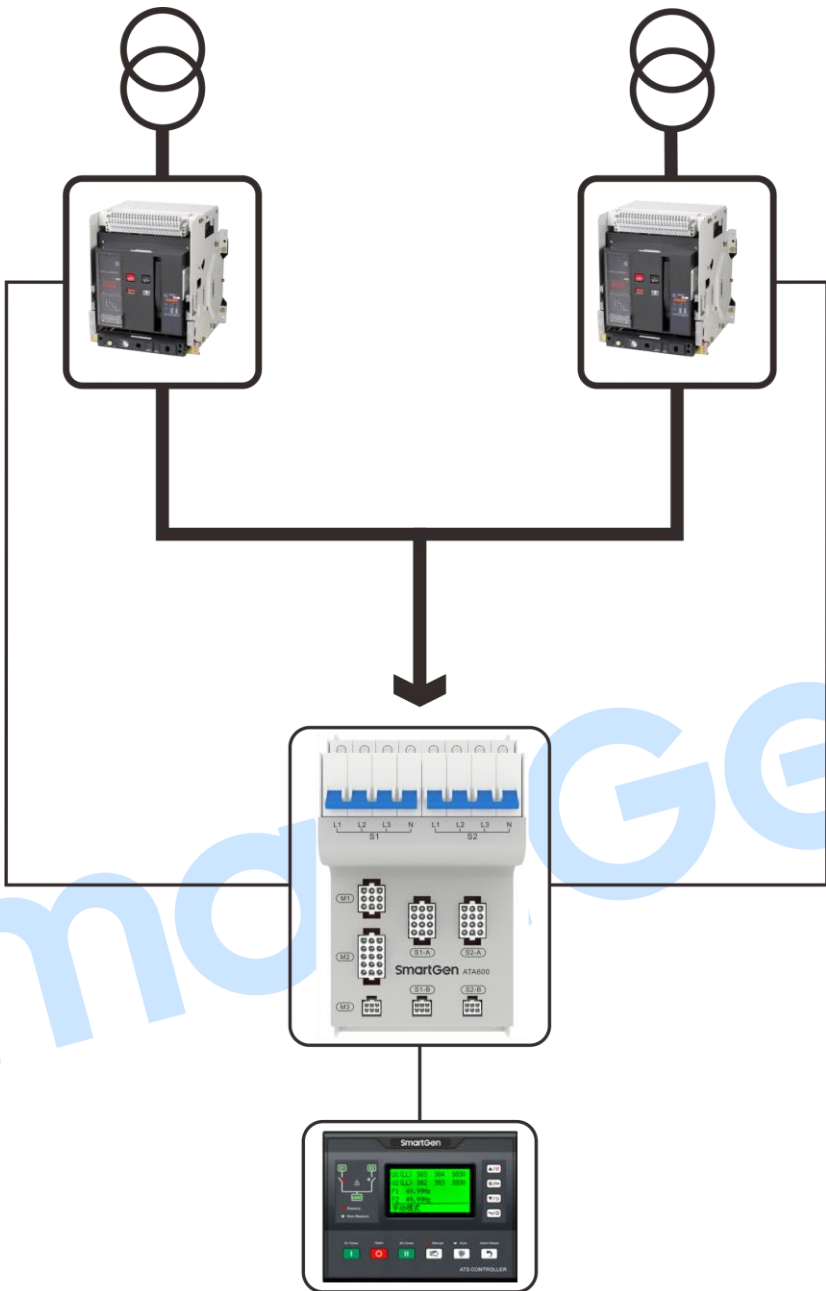


Fig. 3 Application Diagram

6 ACCESSORY ILLUSTRATION

The connected wire harness and terminals matched with terminal block of this product are optional; Users can make clarification at ordering, note the harness requirements and breaker type. See Table 4 for details.

Table 4 Optional Accessory Description

Category	Note
Optional Wire Harness	There are three in total, one of them will be connected to the controller side and the other two will be connected to the circuit breaker side. The length of the wire harness (unit: m) and the model of the circuit breaker should be indicated when choosing.
Optional Terminals	Include the matching terminals and connector terminals.

7 CASE DIMENSIONS

This adapter is designed by screw installation method, and is fixed by four screws at installation.

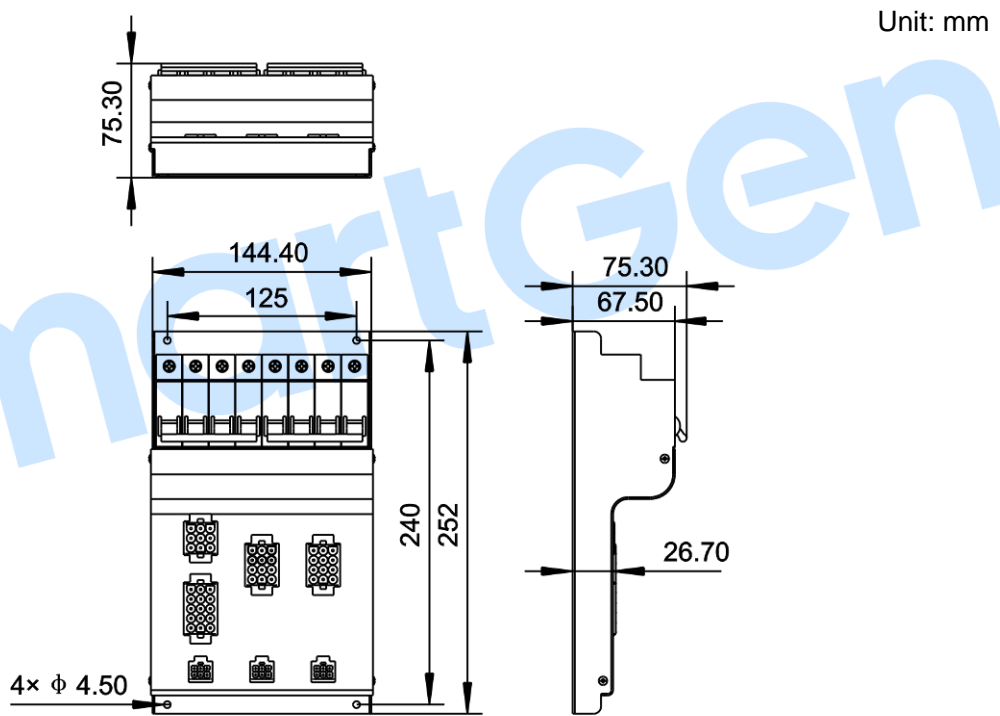


Fig. 4 Case Dimensions and Panel Cutout